

State of Nevada
Department of Transportation
Materials Division

METHOD OF TEST FOR DETERMINING BITUMEN RATIO IN BITUMINOUS PAVING MIXTURES BY THE IGNITION METHOD

SCOPE

This test method is used to determine the bitumen ratio of bituminous paving mixtures by ignition of the asphalt cement in an ignition furnace at 482°C or 538°C (900°F or 1000°F).

APPARATUS

1. Furnace (Figure 1), forced air ignition furnace capable of maintaining temperatures to $538 \pm 5.5^{\circ}\text{C}$ ($1000 \pm 10^{\circ}\text{F}$), with an internal balance thermally isolated from the furnace chamber accurate to 0.1 g. The balance shall be capable of weighing a 3,000 g sample in addition to the sample baskets. A data collection system will be included so that the weight can be automatically determined and displayed during the test. The furnace shall have a built-in computer program to calculate the change in mass of the sample baskets and provide for the input of a calibration factor to account for aggregate loss or incomplete asphalt combustion. The furnace shall provide a printed tape with the initial sample mass, sample mass loss, temperature compensation, calibration factor, corrected asphalt content (%), corrected bitumen ratio (%), test time and test temperature. The furnace chamber dimensions shall be adequate to accommodate a sample size of 3,000 g. The furnace shall provide an audible alarm and visible indicator when the sample mass loss does not exceed 0.01 percent of the total sample mass for three consecutive minutes. The furnace door shall be equipped so that the door cannot be opened during the ignition test. A method for reducing furnace emissions shall be provided. If the furnace uses filters, they must be self-cleaning ceramic filters. The furnace shall be vented into a hood or to the outside and shall have no noticeable odors escaping into the laboratory. The furnace shall have a fan with the capability to pull air through the furnace to expedite the test and to reduce the escape of smoke into the laboratory.
2. Balance, with a capacity of 12,000 g and sensitive to 0.1 g.
3. Sample baskets (Figure 2), two or more nested sample baskets will be used that allow the samples to be thinly spread and allow air to flow up through and around the sample particles. The sample shall be completely enclosed with screen mesh or perforated steel plate with maximum and minimum openings of No. 6 (3.35 mm) and No. 30 (600 μm).
4. Catch pan (Figure 2), sufficient size to hold the sample baskets so that aggregate particles falling through the screen mesh are caught. Wire guards will be provided to attach the sample baskets firmly to the catch pan.
5. Retriever (Figure 2), capable of safely moving the sample baskets in and out of the heated furnace.

6. Oven, capable of maintaining a temperature of $110^{\circ} \pm 5^{\circ}\text{C}$ ($230^{\circ} \pm 9^{\circ}\text{F}$).
7. Safety equipment (Figure 2), face shield or safety glasses to provide eye protection when loading and unloading sample baskets out of the furnace. Gloves capable of withstanding temperatures up to 538°C (1000°F). A protective cage to surround the sample baskets during cooling.
8. Miscellaneous equipment, pans for holding samples. Spatulas and brushes for removing asphalt mixtures and aggregate from baskets and pans.

FURNACE CLEANING

1. The furnace shall be cleaned before a calibration factor (C.F.) is obtained and weekly thereafter, by the field lab tester, to ensure proper operation. Follow the instructions below for proper cleaning. Cleaning shall be performed with the furnace at room temperature.
 - a. After the power to the furnace has been disconnected, disassemble the top vent tube from the blower motor. Using a Shop–Vac, clean out the vent tube and the blower motor of all soot build up.
 - b. Remove the top two covers of the furnace **using an 8.73 mm (11/32 in.) wrench when needed**. Using a Shop–Vac, clean the area under the top two covers. Oil the blower motor with Anderol 465 lubricant.
 - c. Open the chamber door. Using a Shop–Vac clean the area around chamber door. Inspect the door insulation for black streaks of soot. (Usually running from the outside corners of the insulation towards the center.) If black streaks are present, it is a sign the door is loose, and the chamber is sucking in air. Contact the local IA lab for repair.
 - d. Remove the hearth plate and Shop–Vac furnace walls. While the hearth plate is removed, verify ceramic support tube placement. The four ceramic support tubes located in the bottom of the furnace chamber, shall be positioned and seated on the appropriate pins on the balance plate, the tubes shall be centered and shall not touch the sides of the ports. Once the position of ceramic support tubes has been verified, place the hearth plate on top of the tubes.
 - e. In the 1087 and 1275 series furnace there is an orifice in the back of the chamber. This orifice is the opening that extends upward into the top plenum. It acts like a chimney to prevent smoke buildup in the chamber. Ensure this orifice is free of any soot buildup. A pipe cleaner or stiff wire brush can be used to clean out the orifice.
 - f. When all cleaning is complete, put the furnace back together and place heat tape back around the vent tube and blower connection.
 - g. Perform the lift test on the furnace after the weekly cleaning has been completed. Record the lift test on the weekly calibration check on the appropriate NDOT [Agency View](#). Refer to the Operation Manual for the lift test procedure and lift ranges.

- h. Once the furnace has been properly cleaned, the furnace is put back together and the lift test obtained and reported. Turn the furnace on and set the temperature to 650°C (1202°F) in idle mode for two hours. This cleans the elements.

CALIBRATION

1. A calibration factor (C.F.) is required to account for the loss of aggregate during the ignition process or for the incomplete combustion of the asphalt in a sample. The C.F. may be affected by the type, source and gradation of aggregate used, by the type, quantity, and brand of asphalt used, and by the addition of mineral filler. Therefore, to optimize accuracy, a C.F. shall be established for every aggregate type and source, for every type and brand of asphalt used, and for every furnace utilized, as C.F.'s are not interchangeable. Any change in the aforementioned will require that a new C.F. be established.

In addition to the reasons listed above, a new C.F. will be required under the following conditions:

- a. Change in the recommended bitumen ratio (B.R.) greater than 0.4%.
- b. Change in aggregate bin percentages totaling 6.0% or greater.
- c. Change in the amount of mineral filler or a change in the method of adding mineral filler.
- d. Weekly check of the C.F. differs by more than 0.20.
- e. At the discretion of the Engineer.

The C.F. is also dependent upon the testing temperature. Testing will be performed at either 538°C or 482°C (1000°F or 900°F). A test temperature is selected that will provide adequate ignition of the asphalt, while minimizing aggregate loss.

The C.F. will not be established using material from a hot drop, miscellaneous paving or when less than 100 tons of material is produced.

2. After the hotplant has been calibrated, the hotplant inspector will perform a plant settings check to determine the bitumen content that is being introduced into the mix according to the plant settings on the plant controller. The plant settings check shall include the indicated bitumen content contributed to the mix by the Recycled Asphalt Pavement (RAP), if RAP is included on the approved job-mix formula. The bitumen added and the bitumen contributed by the RAP will then be added together to determine the total bitumen ratio according to the plant settings. The hotplant inspector will inform the field tester of the bitumen ratio results of the plant settings check and what range of trucks the representative sample shall be obtained from. This will be required on the first day of bituminous mix production paving, during the field trial mixture, or whenever a new C.F. needs to be established.
3. Obtain a representative sample per Test Method Nev. T200, from behind the paver (for Plantmix Bituminous Surface) or from the auger or windrow (for Plantmix Bituminous Open-Graded Surface)

within the range of trucks given by the hotplant inspector. Obtain enough material to be representatively split into a minimum of four sample splits per furnace (Crew/s, IA, Contractor, Quality Control, etc.).

Obtain four representative splits of the heated sample per Test Method Nev. T203. The weight of each split sample shall be within 100 g of each other.

The size of the test sample shall conform to the minimum mass requirements per Test Method Nev. T206 after the ignition process.

Oven dry the split samples per Test Method Nev. T112 to a constant weight, ensuring there is not any moisture present.

4. Preheat the furnace to 538°C (1000°F).
5. Enter the Dry Mass of the sample and a zero C.F., into the furnace.

To enter a zero C.F. into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “calibration factor”, immediately enter a zero using the number keypad and press enter, wait a moment, and press the “calibration factor” button again to ensure the zero C.F. is correct.

To enter the Dry Mass of the sample into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “weight”, immediately enter the Dry Mass using the number keypad and press enter, wait a moment, and press the “weight” button again to ensure that the Dry Mass weight entered is correct.

6. Once two calibration samples are split to the appropriate sample size and dried to a constant weight, test the samples in accordance with the “PROCEDURE” section, steps 4 through 12, using a correction factor of zero.
7. If the difference between the two determined Calibration Factors is less than or equal to 0.15, these results may be used to calculate the average for the C.F. If the difference between the two determined Calibration Factors exceeds 0.15, repeat the calibration procedure with the two additional sample splits, repeating steps 3 through 12 of the “CALIBRATION” section. From the four samples discard the two split samples with the largest difference in the C.F. and calculate the average for the C.F. from the remaining two results. The difference between these two remaining results must be within 0.15.

If the results are still outside the 0.15 tolerance, repeat steps 3 – 12 with four new split samples. If the C.F. is still outside the tolerance contact the Construction Divisions – Quality Assurance Manager for approval.

8. Calculate the difference between the “Bit. Ratio from Printed Tape” (behind the paver sample, auger, or windrow) and “Bitumen Ratio from Plant Settings Check” to obtain the C.F. for each sample. To obtain the C.F. for this material take the average of the two correction factors to the nearest 0.01.

It is possible that some asphalt/aggregate combinations will produce a B.R. less than the Bitumen Ratio from Plant Settings Check. This will produce a negative C.F., rather than correcting for aggregate/mineral filler loss, a negative C.F. corrects for the asphalt that is not completely ignited during the test procedure.

9. If the C.F. exceeds 1.00, lower the test temperature to 482°C (900°F) and repeat the calibration procedure. Use the C.F. obtained at 482°C (900°F) even if it exceeds 1.00.
10. If excessive aggregate breakage occurs at 538°C (1000°F), the test temperature shall be lowered to 482°C (900°F) and the calibration procedure repeated even if the C.F. does not exceed 1.00.
11. The C.F. to be used for the HMA paving mixture shall be the average between the two C.F. samples tested at the same temperature to the nearest 0.01.
12. The C.F. is to be recorded and used to determine the corrected bitumen ratio of HMA paving mixtures as per the “PROCEDURE” section. The temperature for testing HMA samples in the “PROCEDURE” section shall be the same temperature selected for obtaining the C.F.

CALIBRATION CHECK

1. The C.F. will be verified by testing a single sample at least once [every seven production days of the same mix design or at the discretion of the Engineer](#) by the procedure outlined in this section.
2. [Preheat the furnace to the proper temperature established in the “Calibration” section.](#)
3. [Enter the Dry Mass of the sample and a zero C.F., into the furnace.](#)

[To enter a zero C.F. into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “calibration factor”, immediately enter the C.F. using the number keypad and press enter, wait a moment, and press the “calibration factor” button again to ensure the zero C.F. is correct.](#)

[To enter the Dry Mass of the sample into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “weight”, immediately enter the Dry Mass using the number keypad and press enter, wait a moment, and press the “weight” button again to ensure that the Dry Mass weight entered is correct.](#)

4. If the difference between the “Bitumen Ratio [from Printed Tape](#)” (behind the paver sample, [auger, or windrow](#)) and “Bitumen Ratio [from Plant Settings Check](#)” differs from the C.F. by more than 0.20, a new C.F. will be established as per the “Calibration” section. Record the C.F. weekly check [in the appropriate NDOT Agency View](#).
5. [The material used for the weekly check of the C.F. will not be obtained from a hot drop, miscellaneous paving or when less than 100 tons of material is produced.](#)

SAMPLE PREPARATION

1. Obtain a representative sample of the paving mixture per Test Method Nev. T200.
2. If the mixture is not sufficiently soft to separate during splitting, place it in an oven at 135°C (275°F) until it can be easily handled.

Obtain a representative split of the heated sample per Test Method Nev. T203. The size of the test sample shall conform to the minimum mass requirements per Test Method Nev. T206 after the ignition process.

If the sample size exceeds the capacity of the furnace, the sample may be split into two representative portions and the results combined after testing. Sample sizes shall not be more than 500 g greater than the minimum recommended sample mass.

3. [Use a representative split of material per](#) Test Method Nev. T112 or per Test Method Nev. T306 [to obtain the Moisture Correction \(MC\)](#).

PROCEDURE

1. Preheat the furnace to the proper temperature for the sample to be tested as determined in the “CALIBRATION” section.
2. [Obtain](#) the mass of the Basket [Tare Weight \(g\)](#) (sample baskets, catch pan and guards) and [input](#) in the appropriate NDOT [Agency View](#).
3. Divide the representative split of material into two approximately equal portions, evenly distribute each sample portion into the sample baskets and spread into thin layers. If the sample basket size allows, keep the mix approximately 25 mm (1 in.) away from the sides of the sample baskets to reduce aggregate loss. [Obtain the mass](#) of the [Wt. of Basket & Sample \(g\)](#) (the sample, sample baskets, catch pan, and guards). Calculate the Dry Mass of the sample ([Wt. of Basket and Sample \(g\)](#) – [Basket Tare Weight \(g\)](#)) to the nearest 0.1 g, and record [in](#) the appropriate NDOT [Agency View](#).
4. Enter the Dry Mass of the sample and the C.F., obtained in the “CALIBRATION” section, into the furnace.

To enter the C.F. into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “calibration factor”, immediately enter the C.F. using the number keypad and press enter, wait a moment, and press the “calibration factor” button again to ensure the C.F. number entered is correct.

Take care to input the correct sign (positive or negative) when entering the C.F., press the “calibration factor” button twice to enter a negative value. Press the “calibration factor” button twice to return to a positive value.

To enter the Dry Mass of the sample into the furnace, on the front control panel of the furnace, press the button on the keypad labeled “weight”, immediately enter the Dry Mass using the number keypad and press enter, wait a moment, and press the “weight” button again to ensure that the Dry Mass weight entered is correct.

5. Before placing the sample in the furnace, zero out the balance by pressing the “(0)” button located on the keypad of the furnace.
6. Open the furnace door and gently set the sample basket assembly on the hearth plate. Do not slide the sample basket assembly on the hearth plate or against the thermocouple. Ensure that the sample basket does not contact any of the interior walls of the furnace. Verify that the total sample mass (including the sample basket assembly) displayed on the furnace balance equals the **Wt. of Basket and Sample (g)** recorded within ± 5 g. Differences greater than 5 g or failure of the furnace balance to stabilize may indicate that the sample basket assembly is contacting a furnace wall. **Once verification is within 5 g**, initiate the test, by pressing the “start” button on the furnace keypad. This will lock the furnace door and start the combustion blower. The furnace temperature will drop below the set point (538° or 482°C) when the door is opened but will recover after the door is closed and begins ignition.
7. The sample **will burn** at the specified temperature until the mass loss **reported on the ticket** does not exceed 0.01 percent of the dry mass for three consecutive one minute intervals. The visible indicator and audible stable alarm will indicate that the test is complete. At this point press the “stop” button on the furnace, the test will stop and print out the results.

If there is a power failure and the furnace turns off during ignition, turn the furnace back on and make sure the sample completed combustion. DO NOT open the door until combustion is complete. If a manual calculation of the Bitumen Ratio is needed, make a note **in** the appropriate **NDOT Agency View** as to why a manual calculation was performed.

8. Remove the sample basket assembly from the furnace and allow it to cool. The sample basket assembly shall be placed on a heat resistant surface and covered with the protective cage during cooling.
9. **Bitumen Ratio (B.R.) from Printed Tape** will be automatically computed by the furnace and reported on a printed tape. If the **Moisture Correction (MC)** has been determined, subtract the **Moisture Correction (MC)** from the **Bitumen Ratio from Printed Tape** and report as the Bitumen Ratio.
10. If for any reason the furnace cannot be used to automatically calculate a corrected **Bitumen Ratio**, calculations can be performed manually. Weigh the cooled sample after ignition (sample, sample baskets, catch pan, and guards) and report as the **Mass After**. Calculate the **Bitumen Ratio from Manual Calc.** by the following formula:

$$\text{Bitumen Ratio from Manual Calc.} = \left[\left(\frac{\text{Dry Mass} - \text{Mass After}}{\text{Mass After}} \right) \times 100 \right] - \text{C.F.} - \text{M.C.}$$

Determine the mass of the aggregate after ignition within 30 minutes of cooling.

11. The aggregate remaining after ignition should be used for the sieve analysis if required per the specifications, per Test Method Nev. T206.

REPORT

B.R. shall be reported to the nearest 0.1 [in](#) the appropriate NDOT [Agency View](#).



Figure 1
Furnace

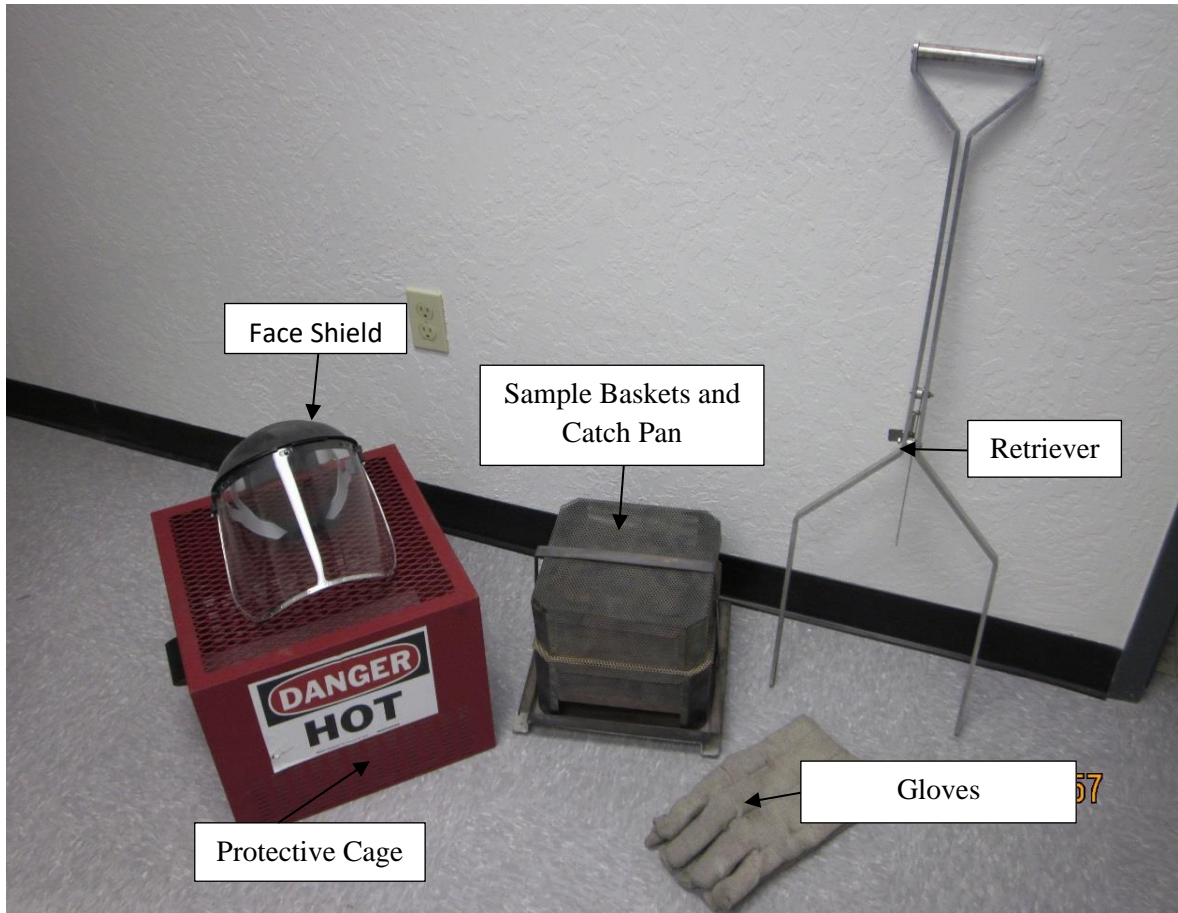


Figure 2